30221 8ft/ 2.4m
30222 10ft/ 3m

plum®
the active play specialists

assembly instructions

Premium magnitude trampoline & enclosure

assembly requires 2 adults
(approx. 2 hours assembly time)

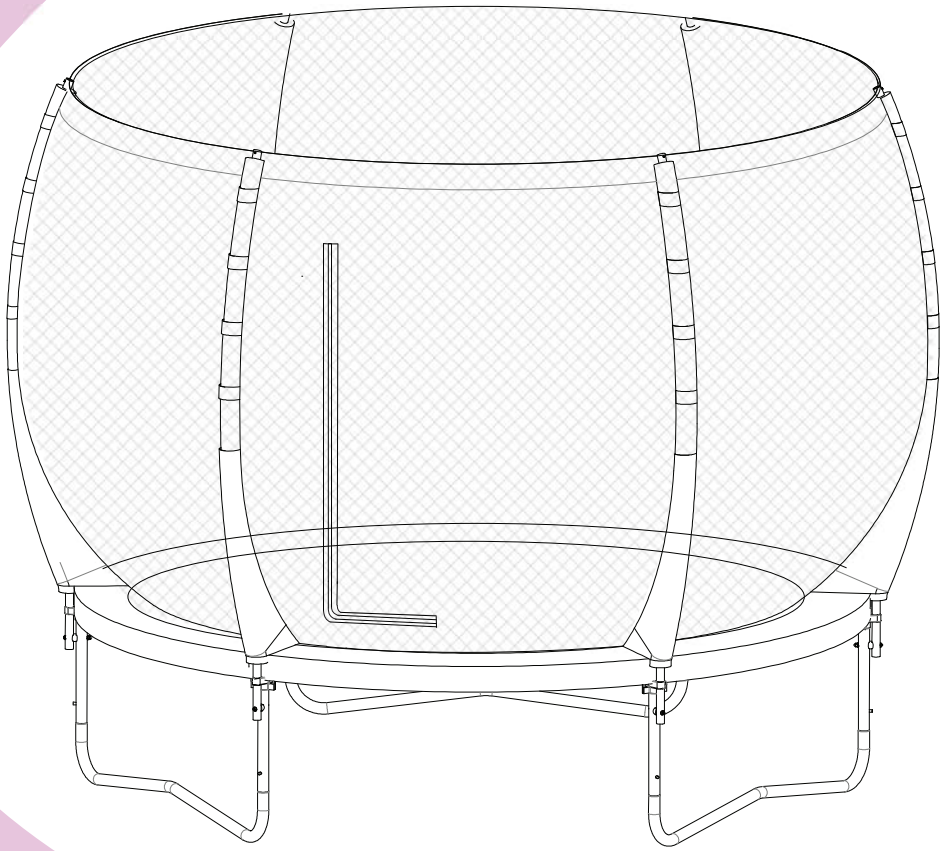

WARNING! Not suitable for children under 36 months - small parts. Min user age 6 years. Max user weight 75kg (8ft) and 100kg (10ft).
Only for domestic use. Outdoor use only.
Adult assembly required. Adult supervision recommended at all times.

SAFETY INSTRUCTIONS

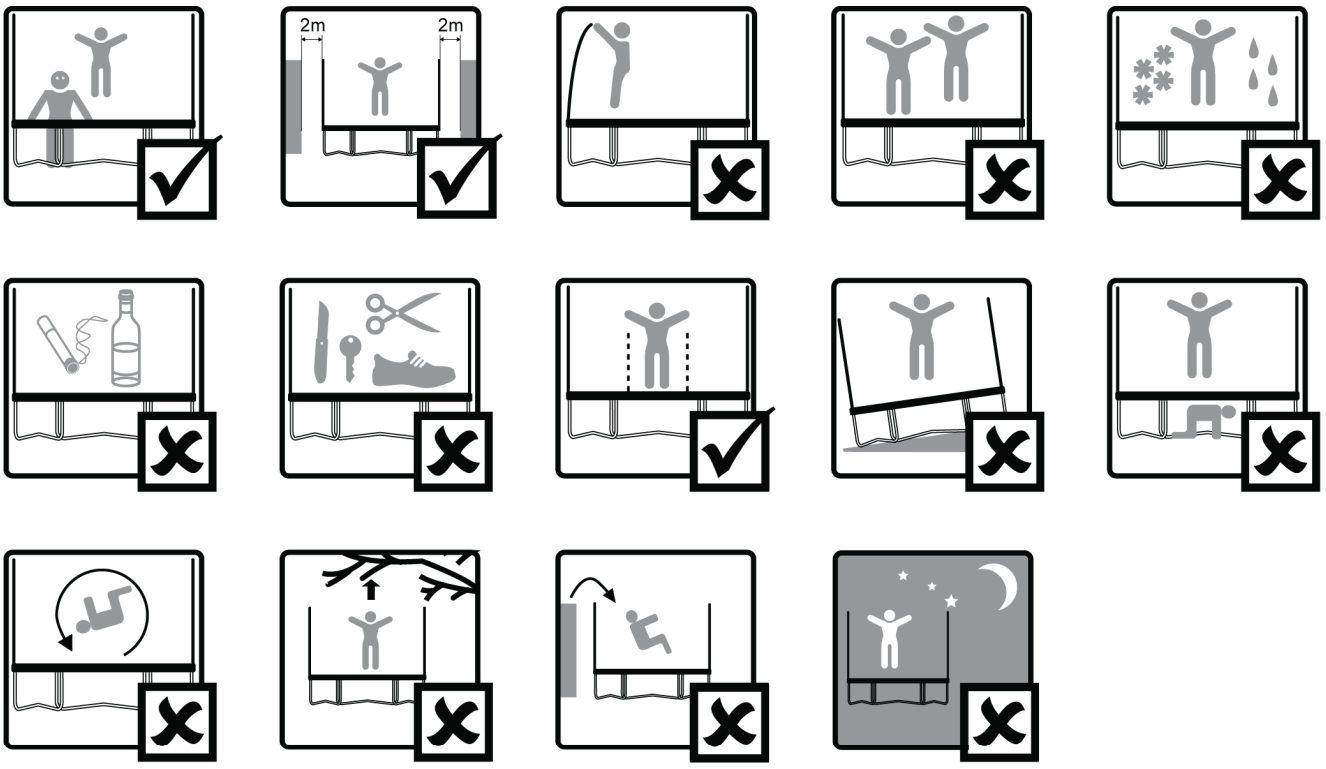

WARNINGS!

Adult supervision recommended at all times
Only for domestic use
Outdoor use only
One user at a time, collision hazard
Always close the net opening before jumping
Jump without shoes
Do not use the mat when it is wet
Empty pockets and hands before jumping
Always jump in the middle of the mat
Do not eat while jumping
Do not exit the trampoline by jumping off it
No somersaults
Limit the time of continuous usage (make regular stops)
Do not use in strong wind conditions and secure the trampoline. In some circumstances it may be necessary to move the trampoline to a sheltered area. Plum trampoline anchor kits are available to purchase. Please refer to website for details
The trampoline shall be assembled by an adult in accordance with the assembly instructions and thereafter checked before the first use

trampoline	kg max user	age range	cm
55”	40kg	3-6	Ø140xH186
6ft	50kg	3 -10	Ø183xH200
7ft	50kg	3 -10	Ø213xH193
8ft	75kg	6+	Ø244xH240
10ft	100kg	6+	Ø305xH259
12ft	125kg	6+	Ø366xH269
14ft	125kg	6+	Ø426xH269

ADVISORY

Do not bury, the trampoline is not intended to be placed into the ground
Always seek help from others when moving or lifting the trampoline
Do not intentionally bounce off the enclosure net. Deliberate jumping into or bouncing off of the enclosure is potentially dangerous. It will reduce the life of your enclosure considerably and could invalidate your warranty
Do not pull the top of the enclosure net
We recommend you place the trampoline on a level surface at least 2m from any overhead structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires
Do not install the trampoline over concrete, asphalt or any other hard surface. Place the trampoline at least 2m away from any adjacent objects such as paddling pools, swings, slides, climbing frames etc.
When making modifications to the trampoline, such as adding a Plum accessory, always follow the instructions provided with your Plum accessory

MAINTENANCE

At the beginning of the season check the trampoline frame, suspension system, mat, padding and enclosure, ensuring that all fasteners are tightened securely and that the net is taut. Regular checks should be carried out to ensure continued safe use, failure to do so may result in the trampoline becoming dangerous.
Check that all spring loaded (pit pin) joints are still intact and cannot become dislodged during play
Check that the mat, padding and enclosure are without defects before jumping
Replace the enclosure net after one year of use
Make sure that the hook-and-hoop fasteners on the enclosure entrance are closed correctly during use of trampoline
Check all coverings and sharp edges, replace parts when required
To prevent damage by displacement, secure the trampoline in strong wind conditions with a Plum trampoline anchor kit. It may also be necessary to remove the enclosure net and jumping mat
In the event of snowfall or very low temperature remove the snow and store the mat and enclosure indoors to prevent damage to the trampoline

Retain this instruction manual for your records

VARNING!

Tillsyn av en vuxen rekommenderas alltid
Endast för hemmabruk
Endast för utomhusbruk
Endast en person åt gången, kollisionsrisk.
Stäng alltid till nätöppningen innan du börjar hoppa.
Hoppa alltid utan skor.
Använd inte hoppduken när den är blöt.
Töm fickorna och händerna innan du börjar hoppa.
Hoppa alltid i mitten av studsmattan.
Ät inte medan du hoppar.
Hoppa aldrig av studsmattan när du ska av.
Inga kullerbyttor.
Begränsa hur lång tid du hoppar i ett sträck (pausa regelbundet).
Använd inte i kraftig blåst och säkra studsmattan. Ibland kan det vara nödvändigt att flytta studsmattan till en skyddad plats.
Förankringsset för Plum studsmattan finns att köpa. Se vår webbplats för mer information.
Studsmattan skall monteras av en vuxen enligt monteringsanvisningarna och därefter kontrolleras innan den första användningen.

Studsmattan är inte avsedd till att grävas ner i marken.
Be alltid om hjälp till att flytta eller lyfta studsmattan.
Hoppa inte ut ur skyddsnätet med avsikt. Att med avsikt
hoppa in i eller ut ur skyddsnätet kan innebära
fara. Det kommer att minska livstiden för skyddsnätet betydligt och kan ogiltigförklara din garanti.
Drag inte i den övre delen av skyddsnätet.
Vi rekommenderar att du ställer studsmattan på en plan yta och minst 2m från någon överliggande struktur eller hinder som t.ex. ett staket, garage, hus, trädgrenar, tvättlinor eller elektriska ledningar.
Ställ inte studsmattan på betong, asfalt eller andra hårda ytor. Ställ studsmattan minst 2m från intilliggande föremål som t.ex. plaskdammar, gungor, rutschbanor, klätterställningar och dylikt.
Om du gör några ändringar på studsmattan, som t.ex. att lägga till något Plum-tillbehör, följ alltid den medföljande bruksan visningen.

I början på säsongen bör du alltid kontrollera studsmattans ram, fjädringssystem, hoppduk, vaddering och skyddsnät och säkerställa att alla fästen är ordentligt åtdragna och att skyddsnätet är sträckt. Du bör kontrollera studsmattan regelbundet för att se till att den fortfarande är säker att använda. Att underlåta att göra detta kan betyda att studsmattan kan komma att utgöra fara.
Kontrollera att alla fjäderbelastade stift och fästen är intakta och inte kan lossna under leken.
Kontrollera att hoppduken, vadderingen och skyddsnätet inte har några felaktigheter.
Byt ut skyddsnätet efter ett års användning.
Se till att alla kardborrefästen är ordentligt förslutna i skyddsnätets öppning under användningen.
Kontrollera alla överdrag och skarpa kanter och byt ut delar vid behov.
För att förhindra att studsmattan förflyttas och skadas i kraftig blåst kan du hålla den på plats med ett Plum förankringsset. E ventuellt bör du också ta bort skyddsnätet och hoppduken.
I händelse av snöfall eller mycket låg temperatur skall du borsta av snön och sedan förvara hoppduken och skyddsnätet in omhus för att förhindra skada.

Behåll bruksanvisningen för framtida behov.

PARTS LIST

All dimensions are approximate

PART ID	DIMENSIONS WITH GRAPHIC	QUANTITY	
		8FT	10FT
1	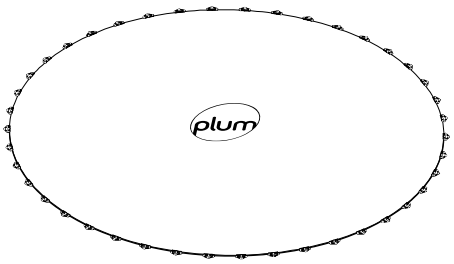	1	1
2	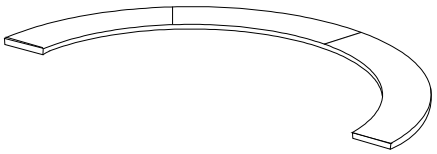	2	2
3	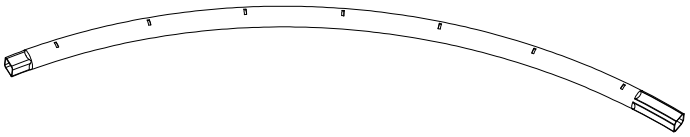	6	6
4	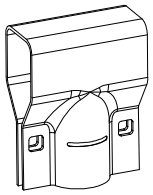	6	6
5	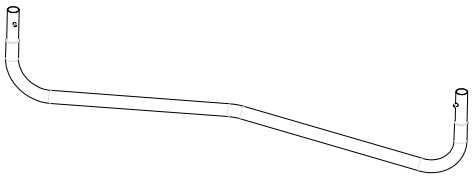	3	3
6		6	6
7	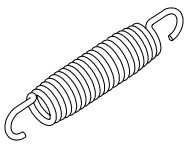	60	66
8	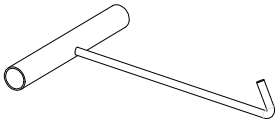	1	1
9		6	6

TOOLS REQUIRED:

PARTS LIST

All dimensions are approximate

PART ID	DIMENSIONS WITH GRAPHIC	QUANTITY	
		8FT	10FT
10	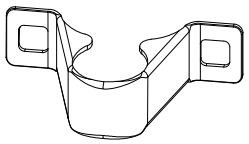	6	6
11		12	12
12	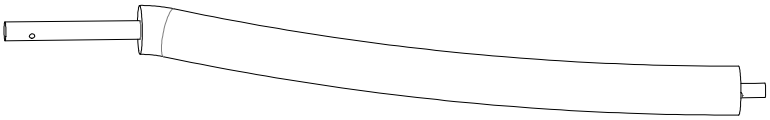	6	6
13	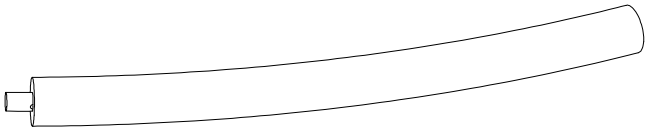	6	6
14	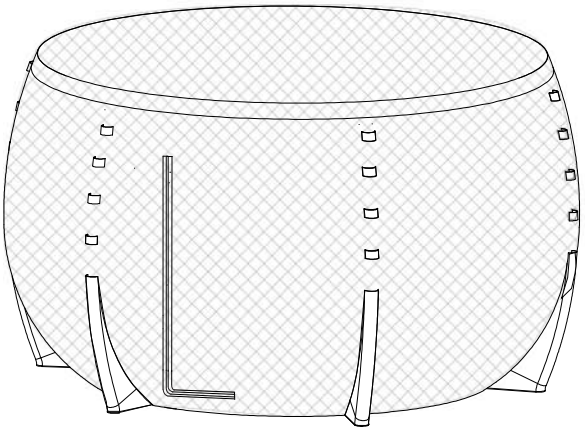	1	1
15		1	1
16		6	6
17	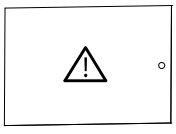	1	1
18		1	1
19		1	1
20		1	1

1

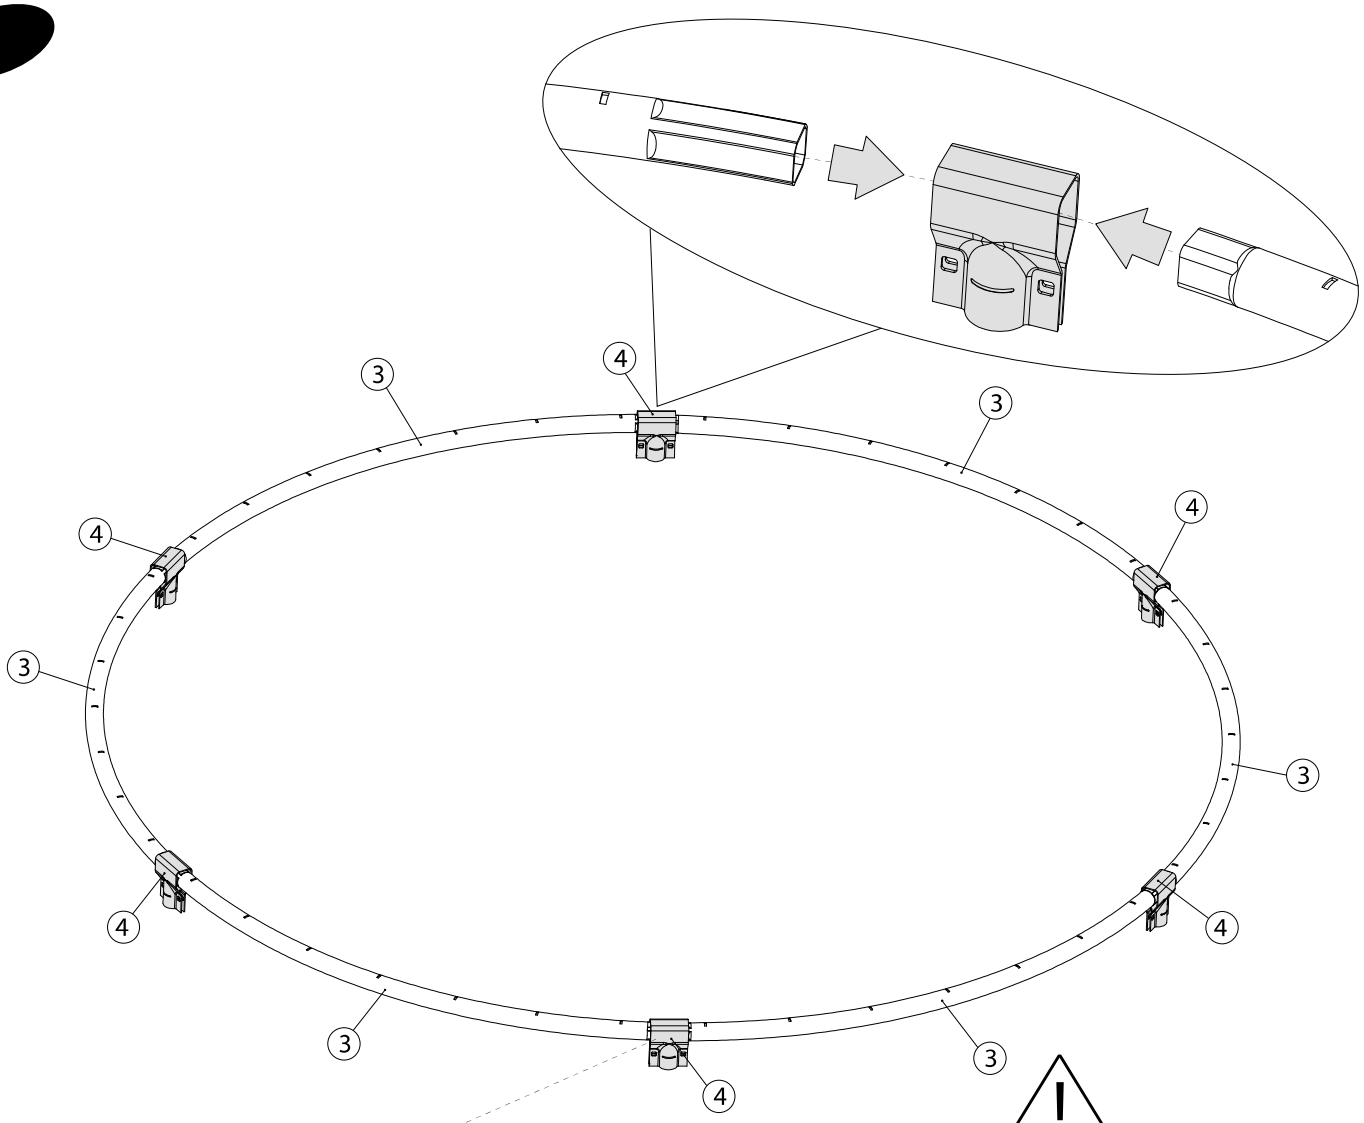

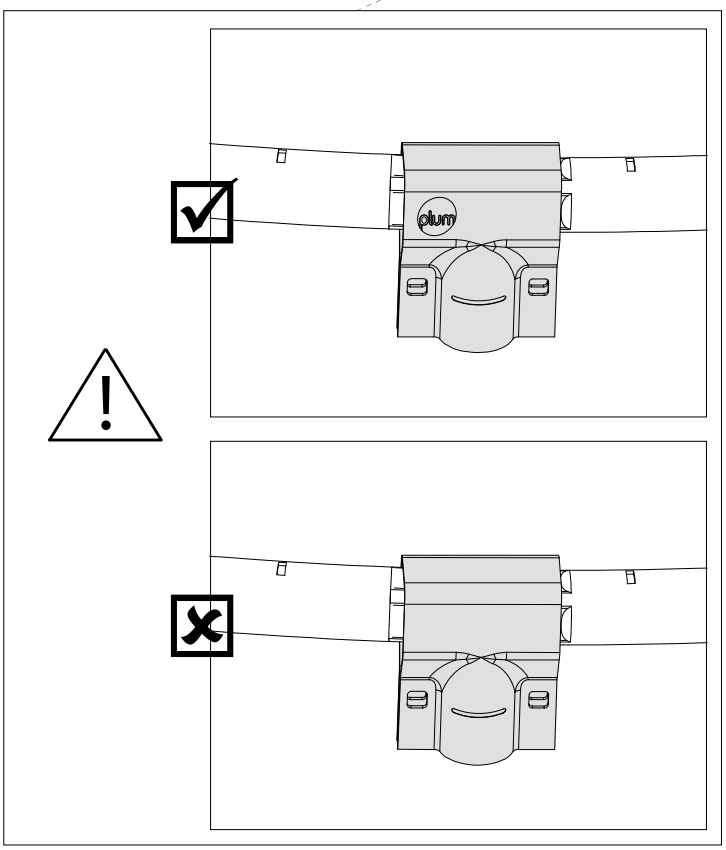

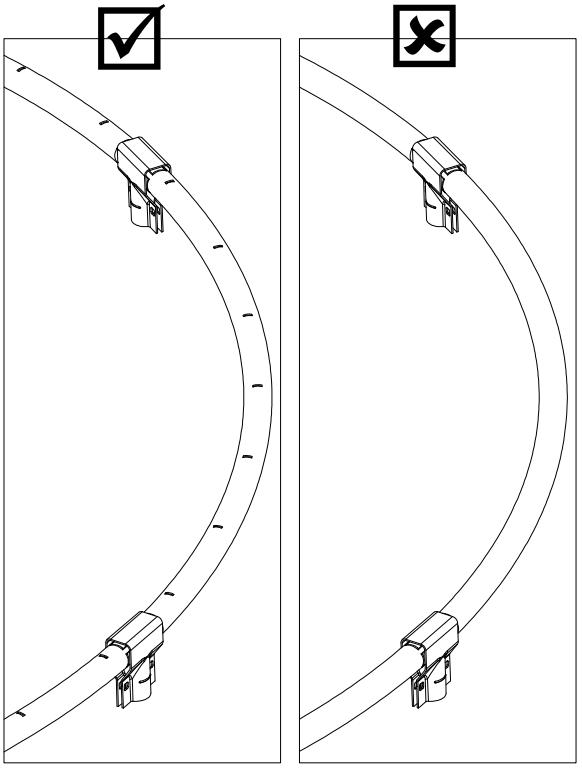

2

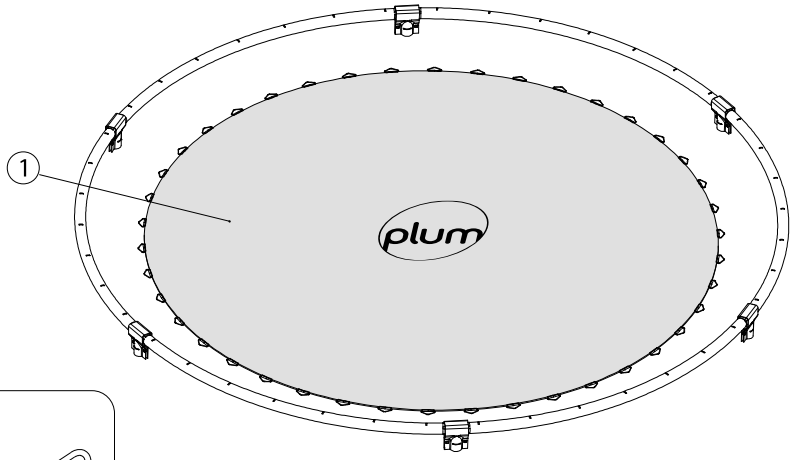
1
plum

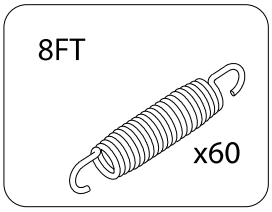
8FT
x60

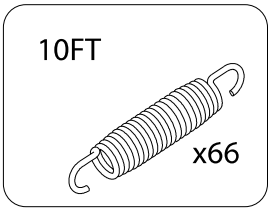
10FT
x66

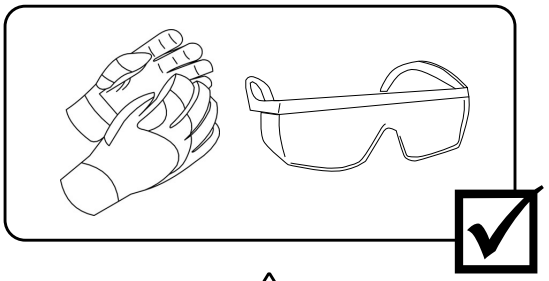

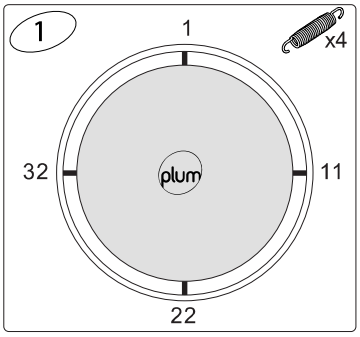
1
x4
1
11
22
32
plum

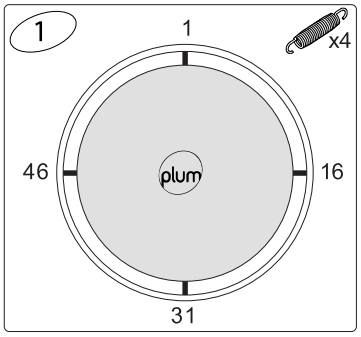
1
x4
1
16
31
46
plum

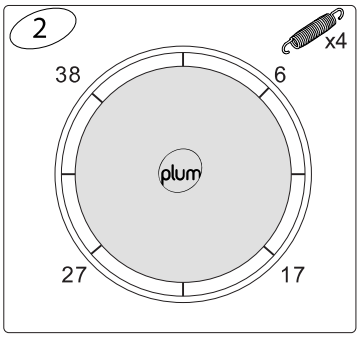
2
x4
6
17
27
38
plum

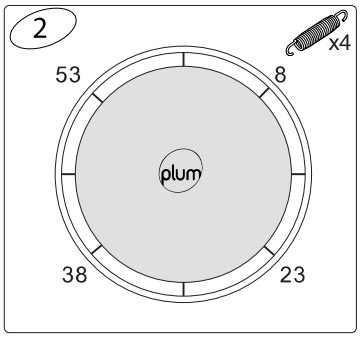
2
x4
8
23
38
53
plum

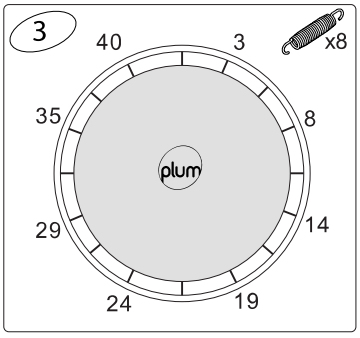
3
x8
3
8
14
19
24
29
35
40
plum

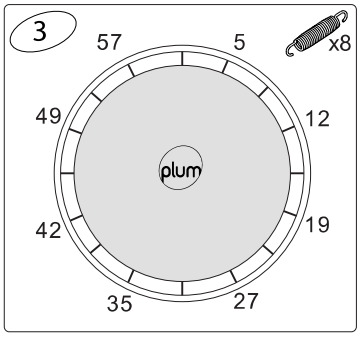
3
x8
5
12
19
27
35
42
49
57
plum

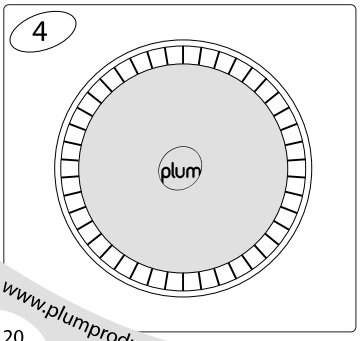
4
plum

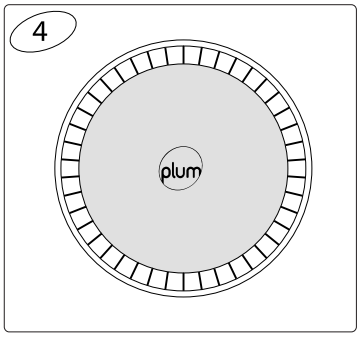
4
plum

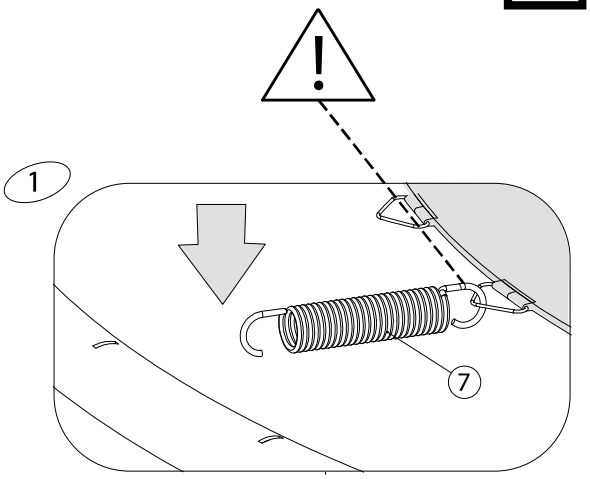
1
7

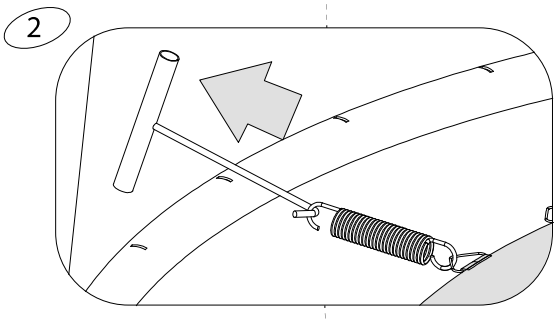
2

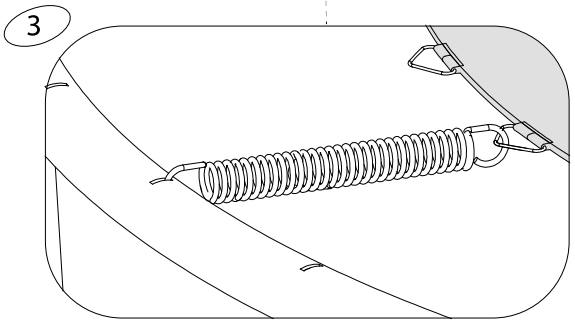
3

3

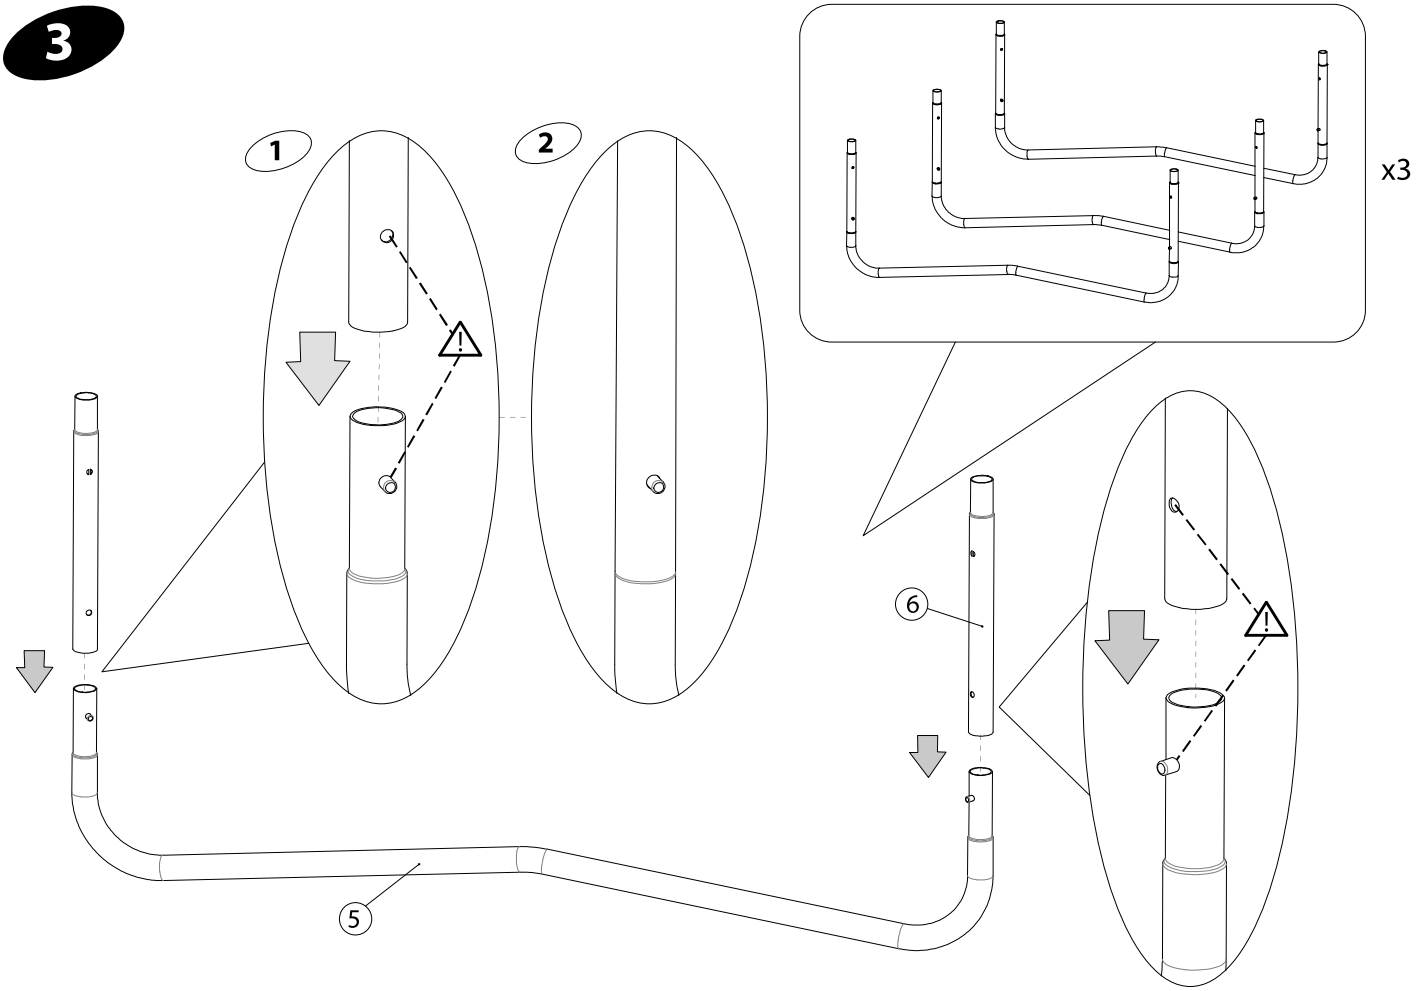

4

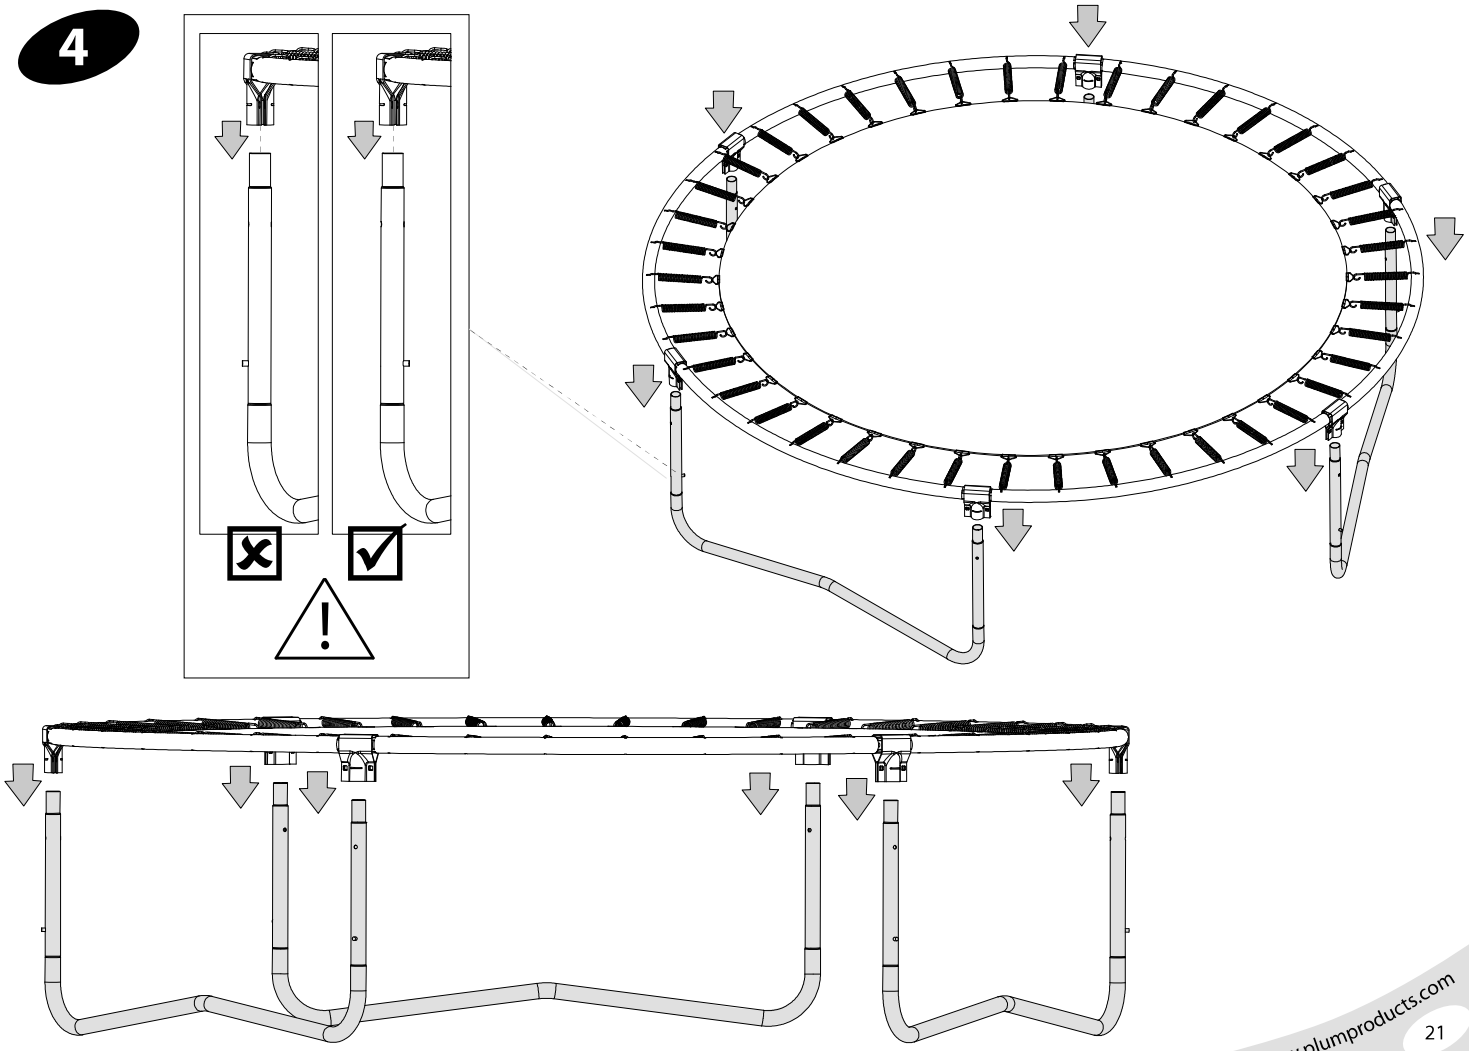

5

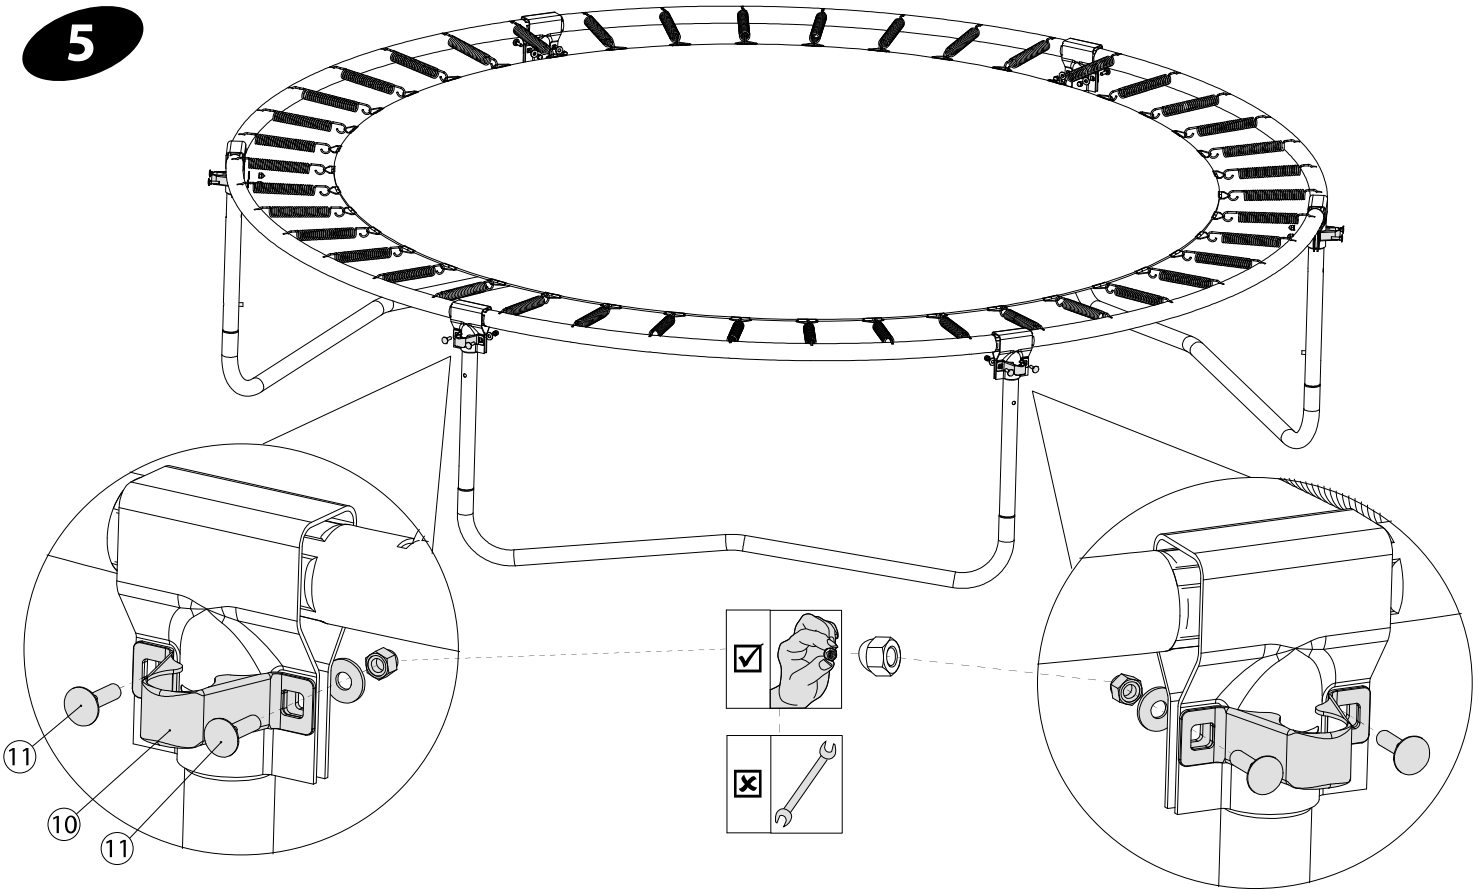

6

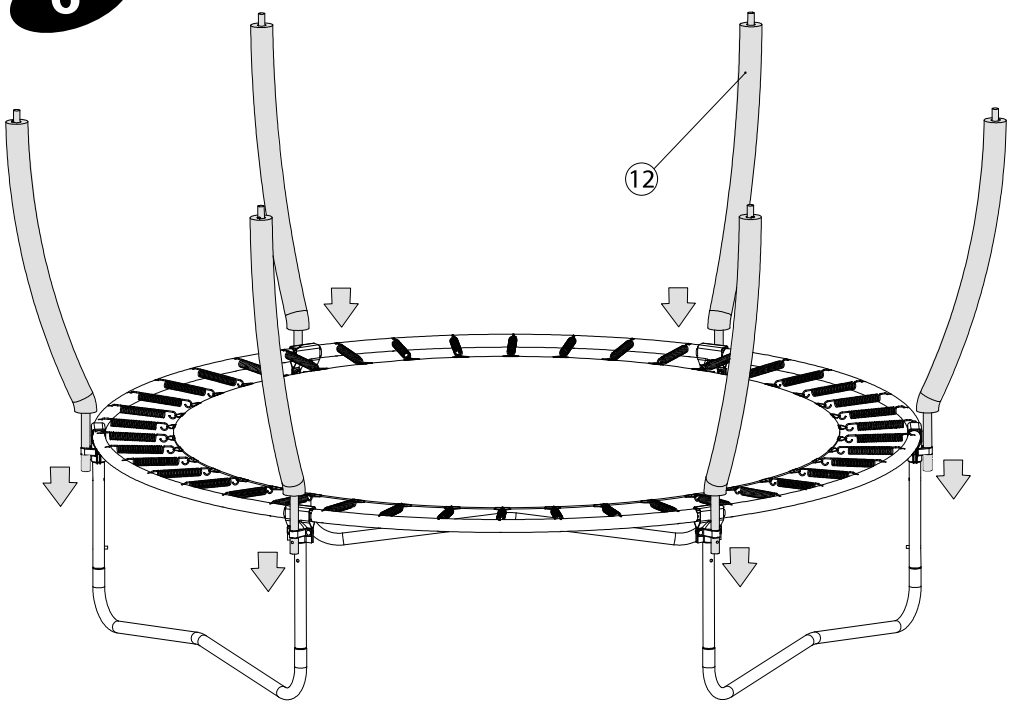

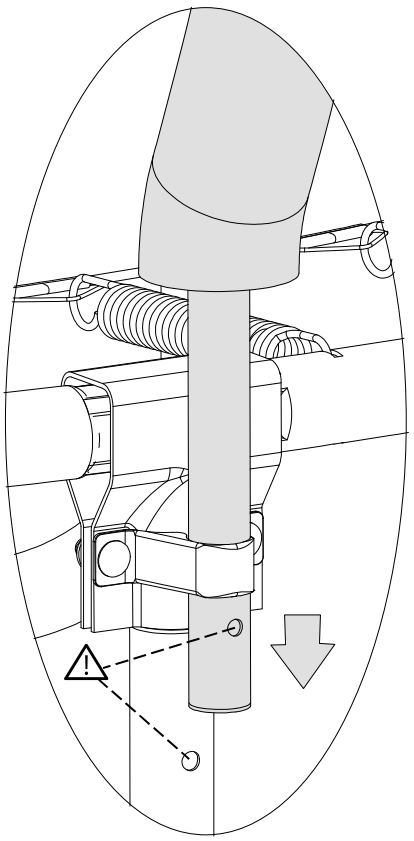

7

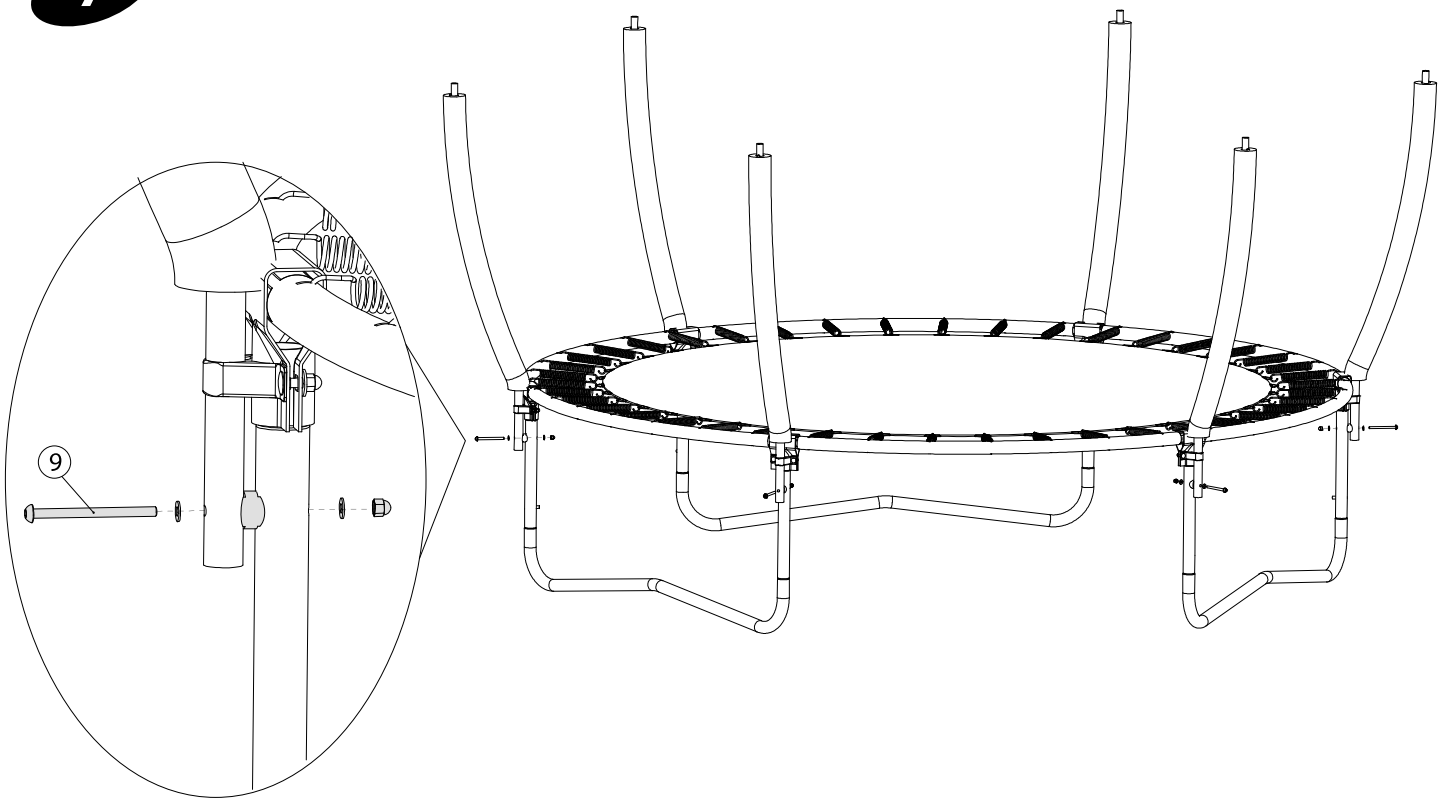

8

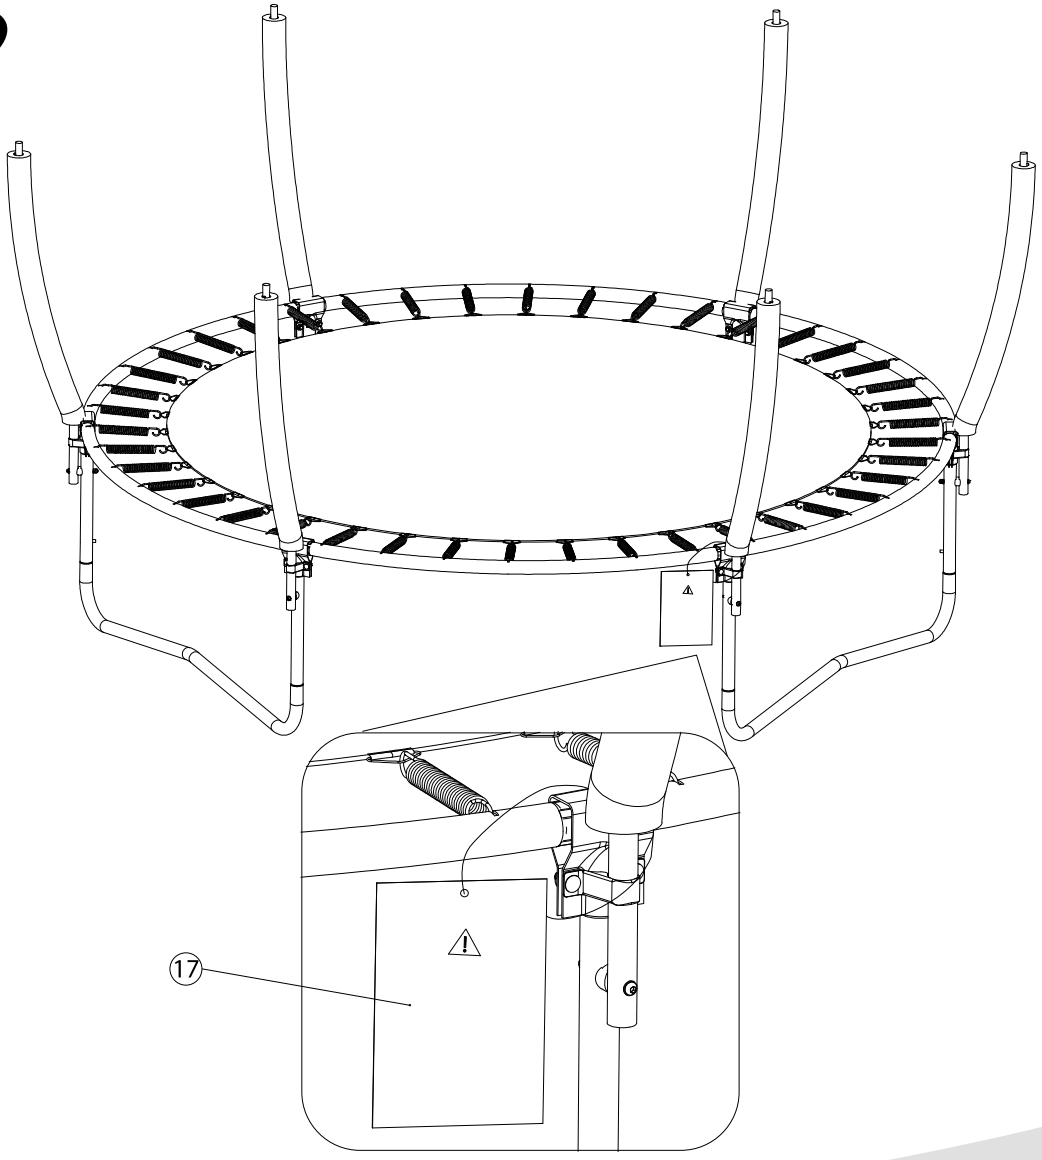

9

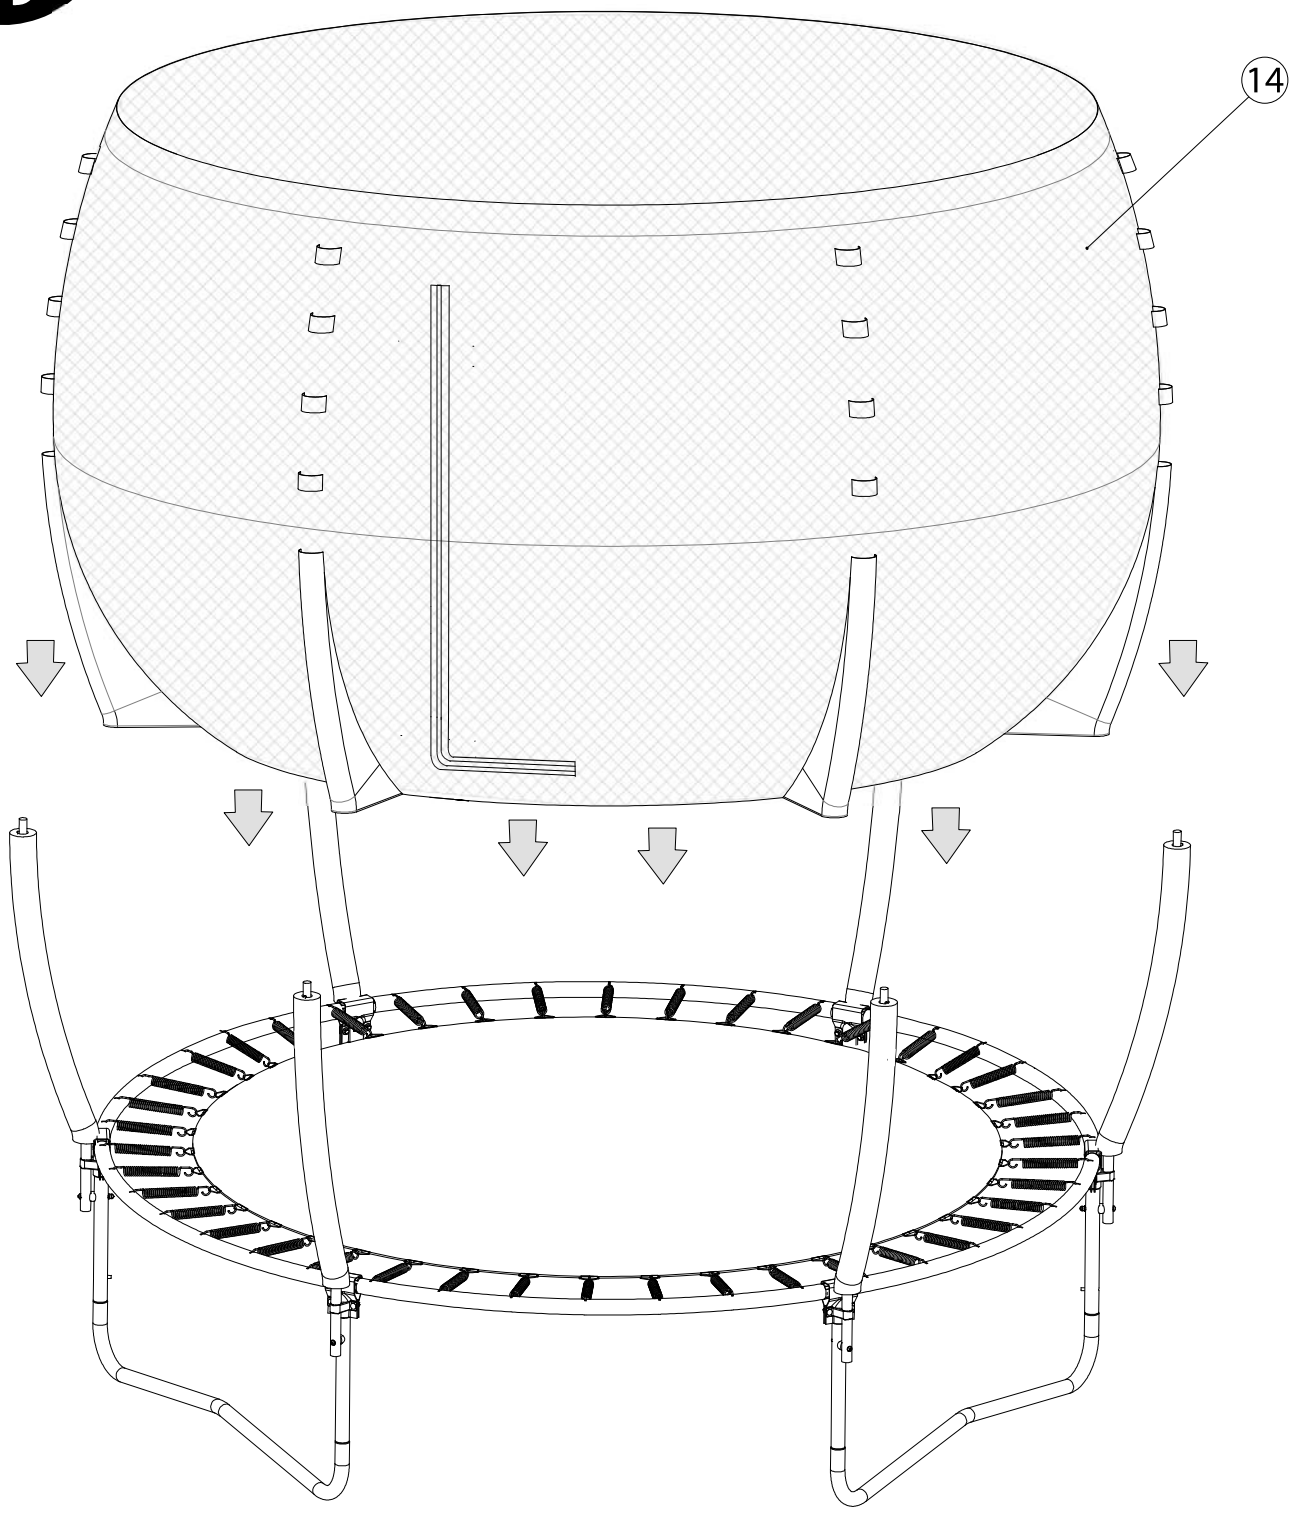

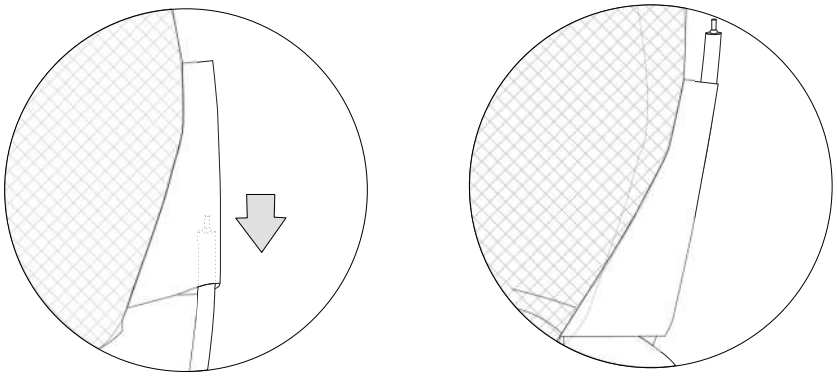

10

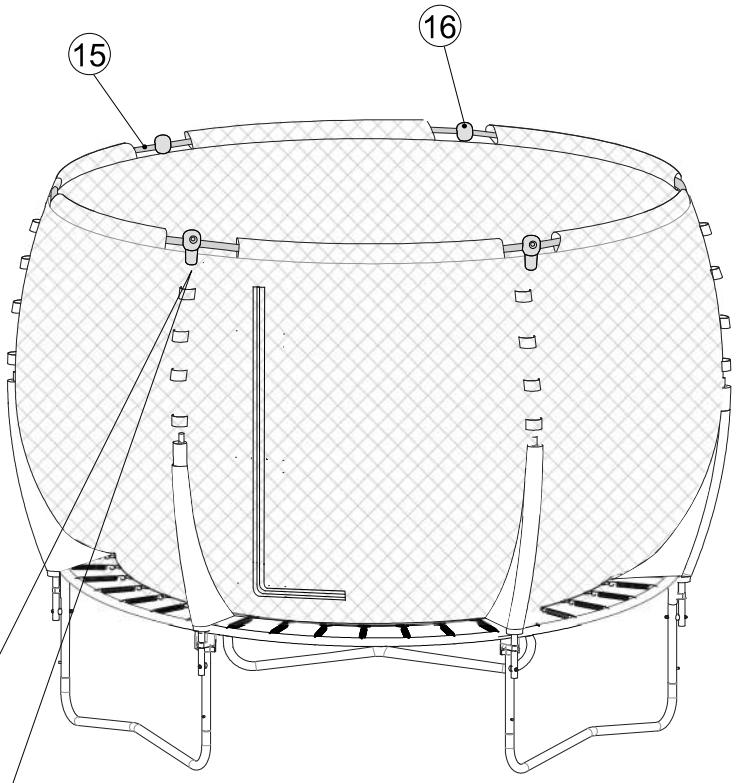

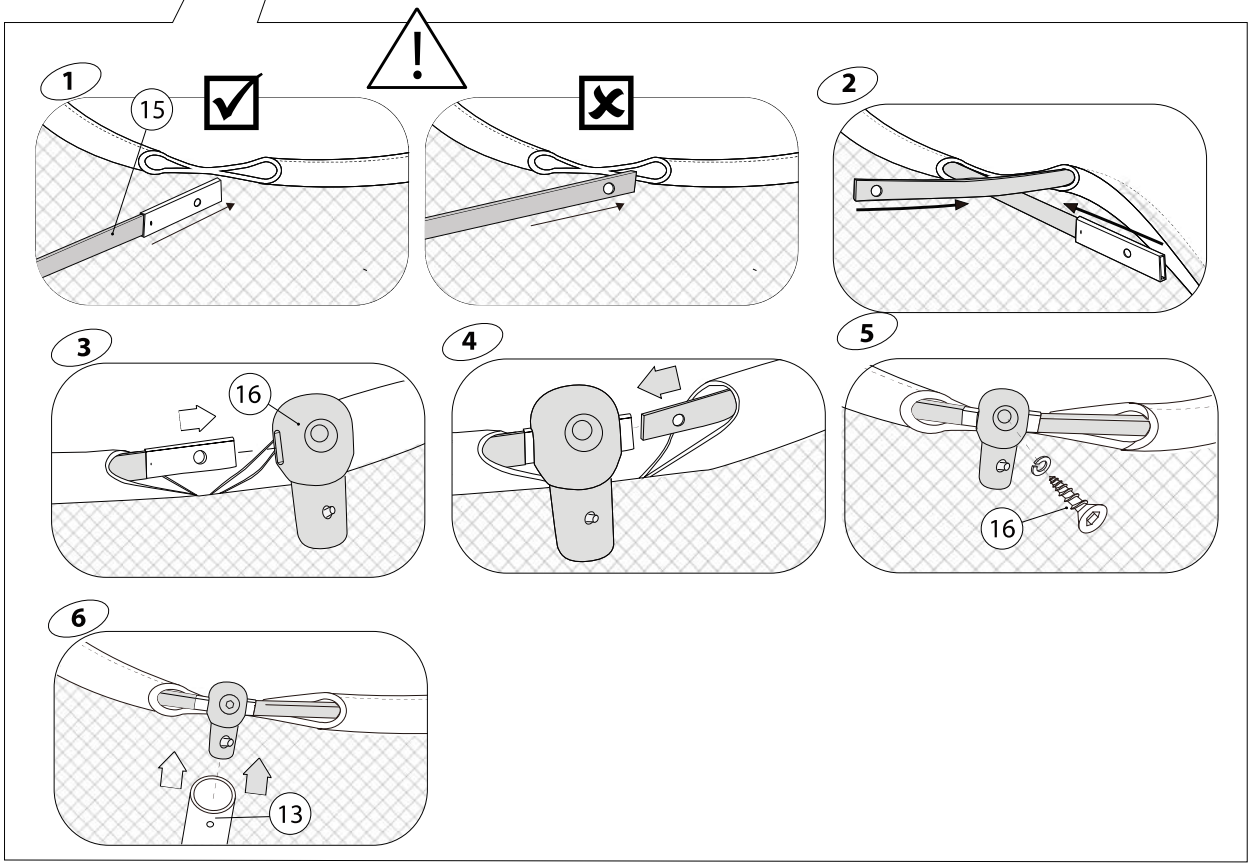

11

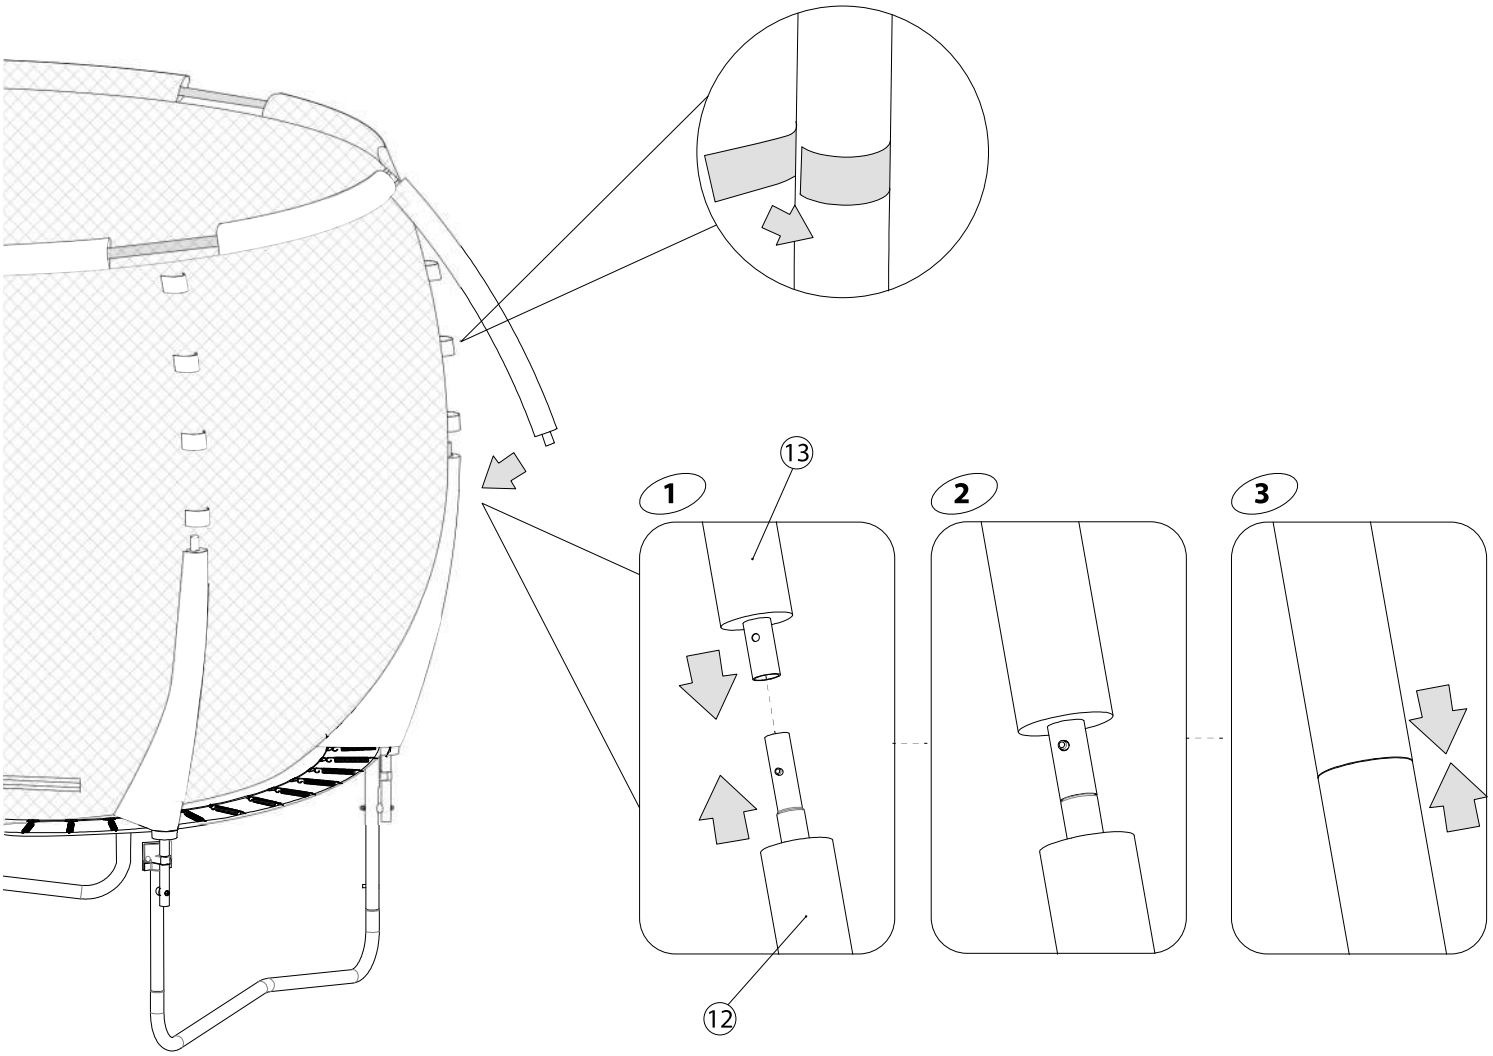

12

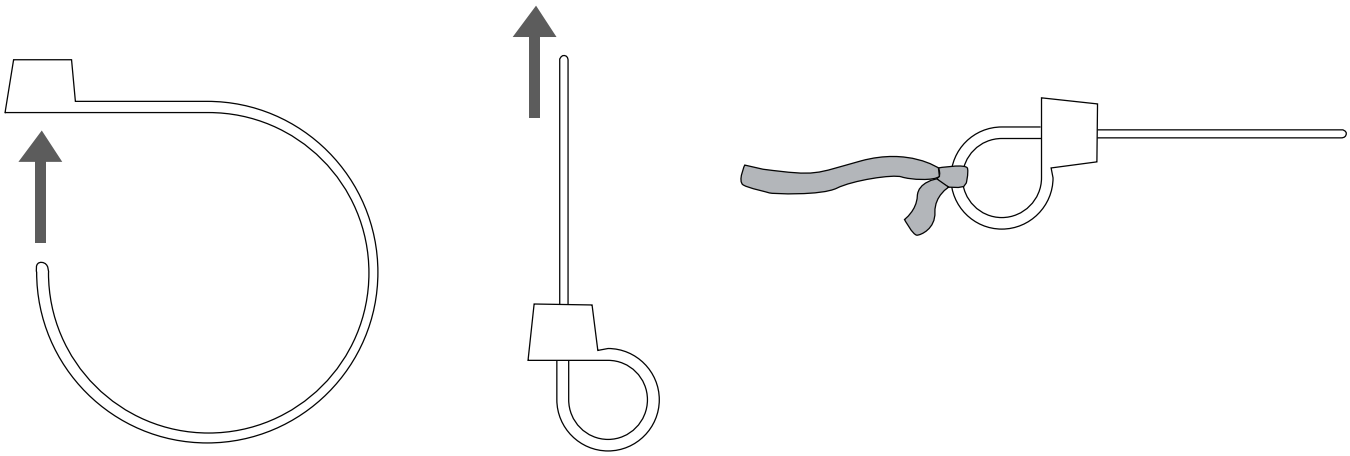

13

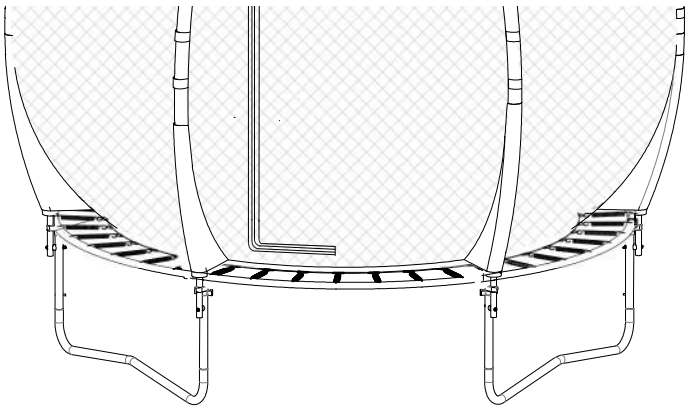

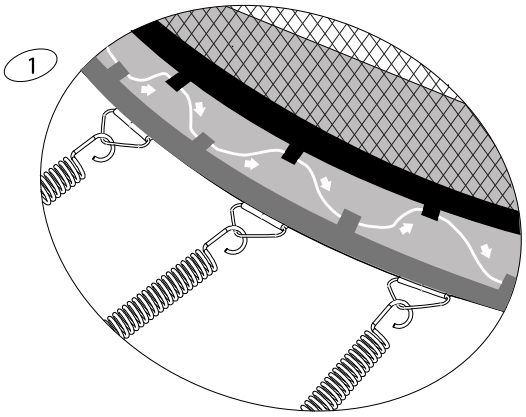

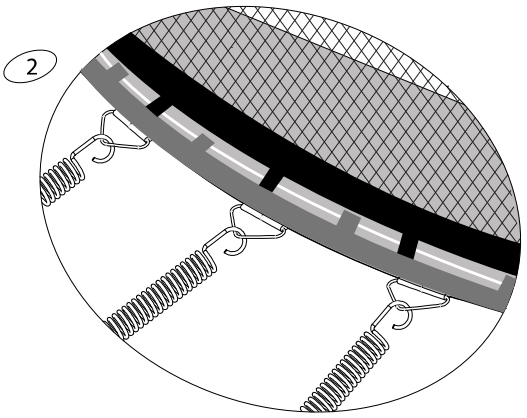

14

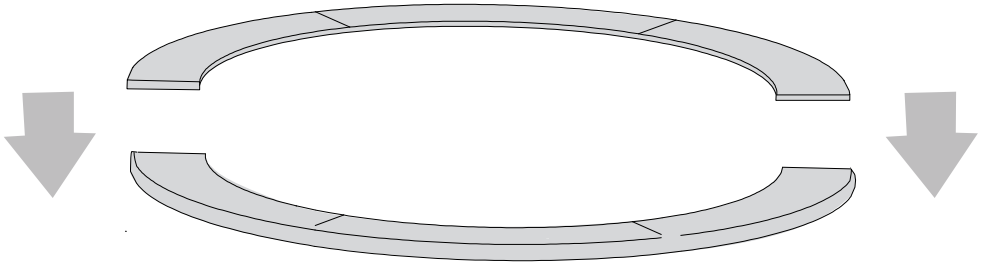

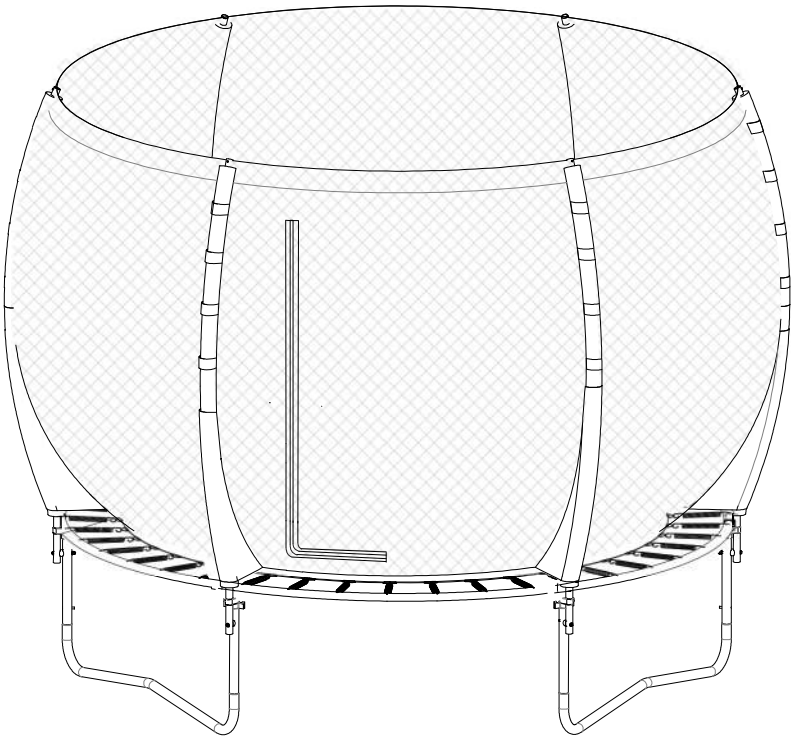

15

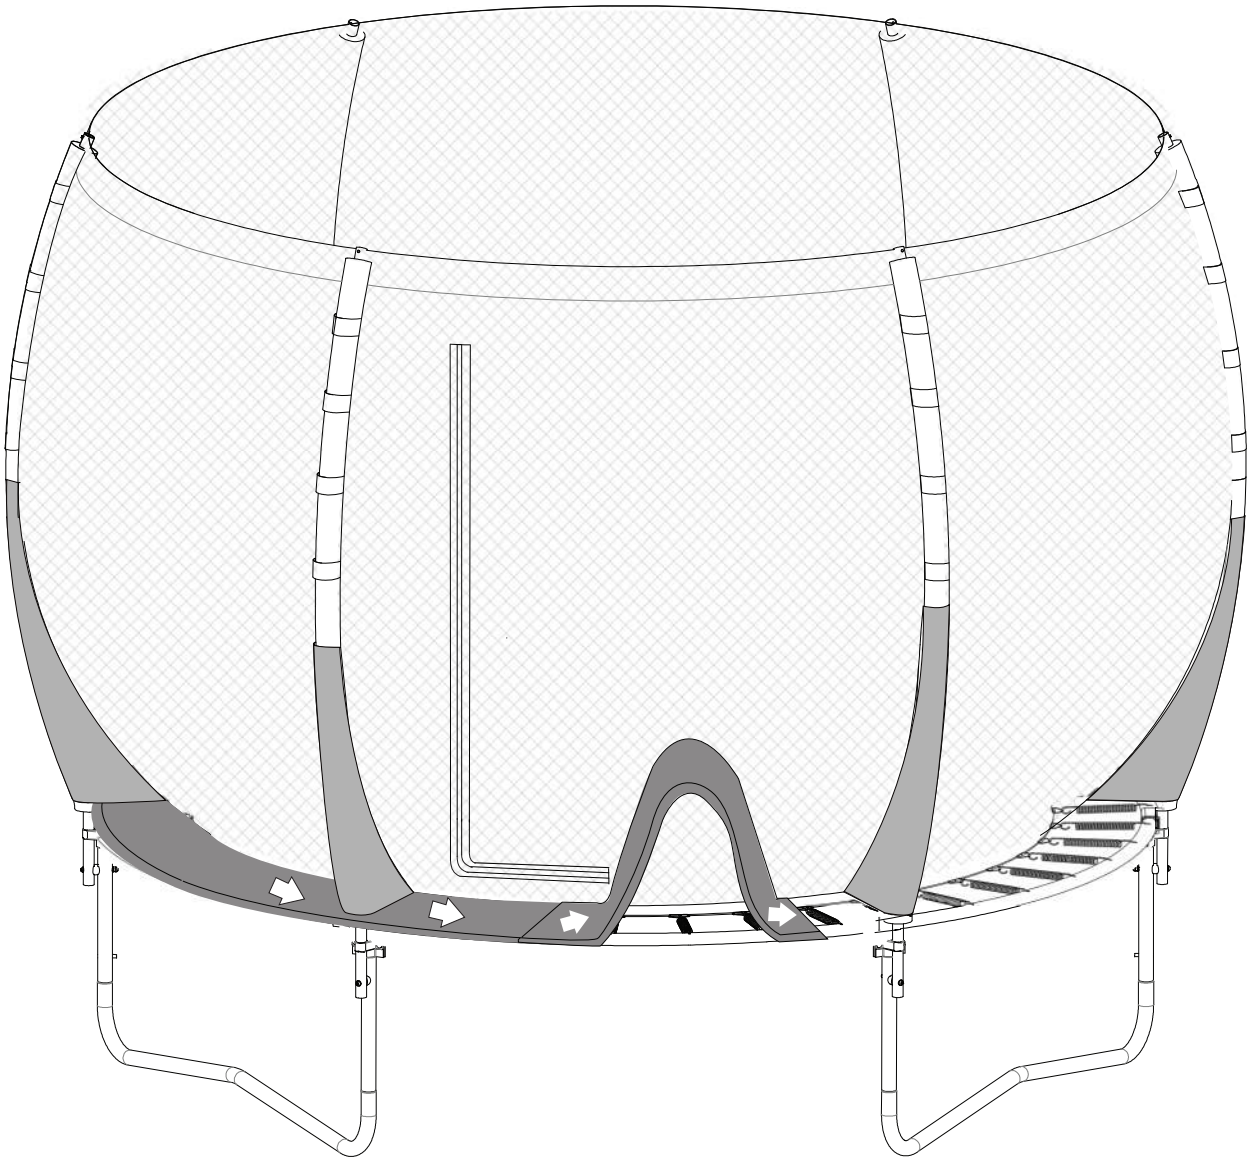

x2

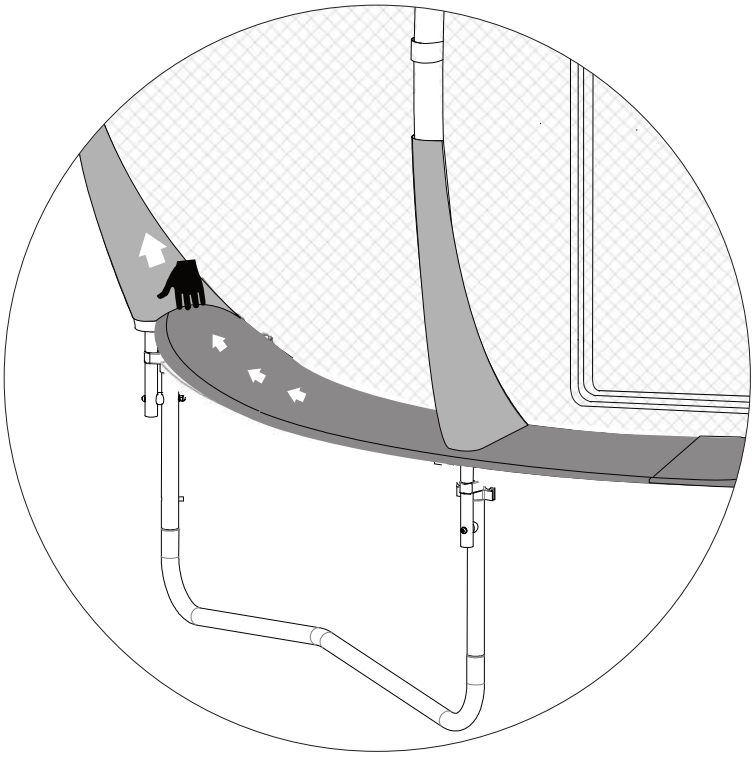

16

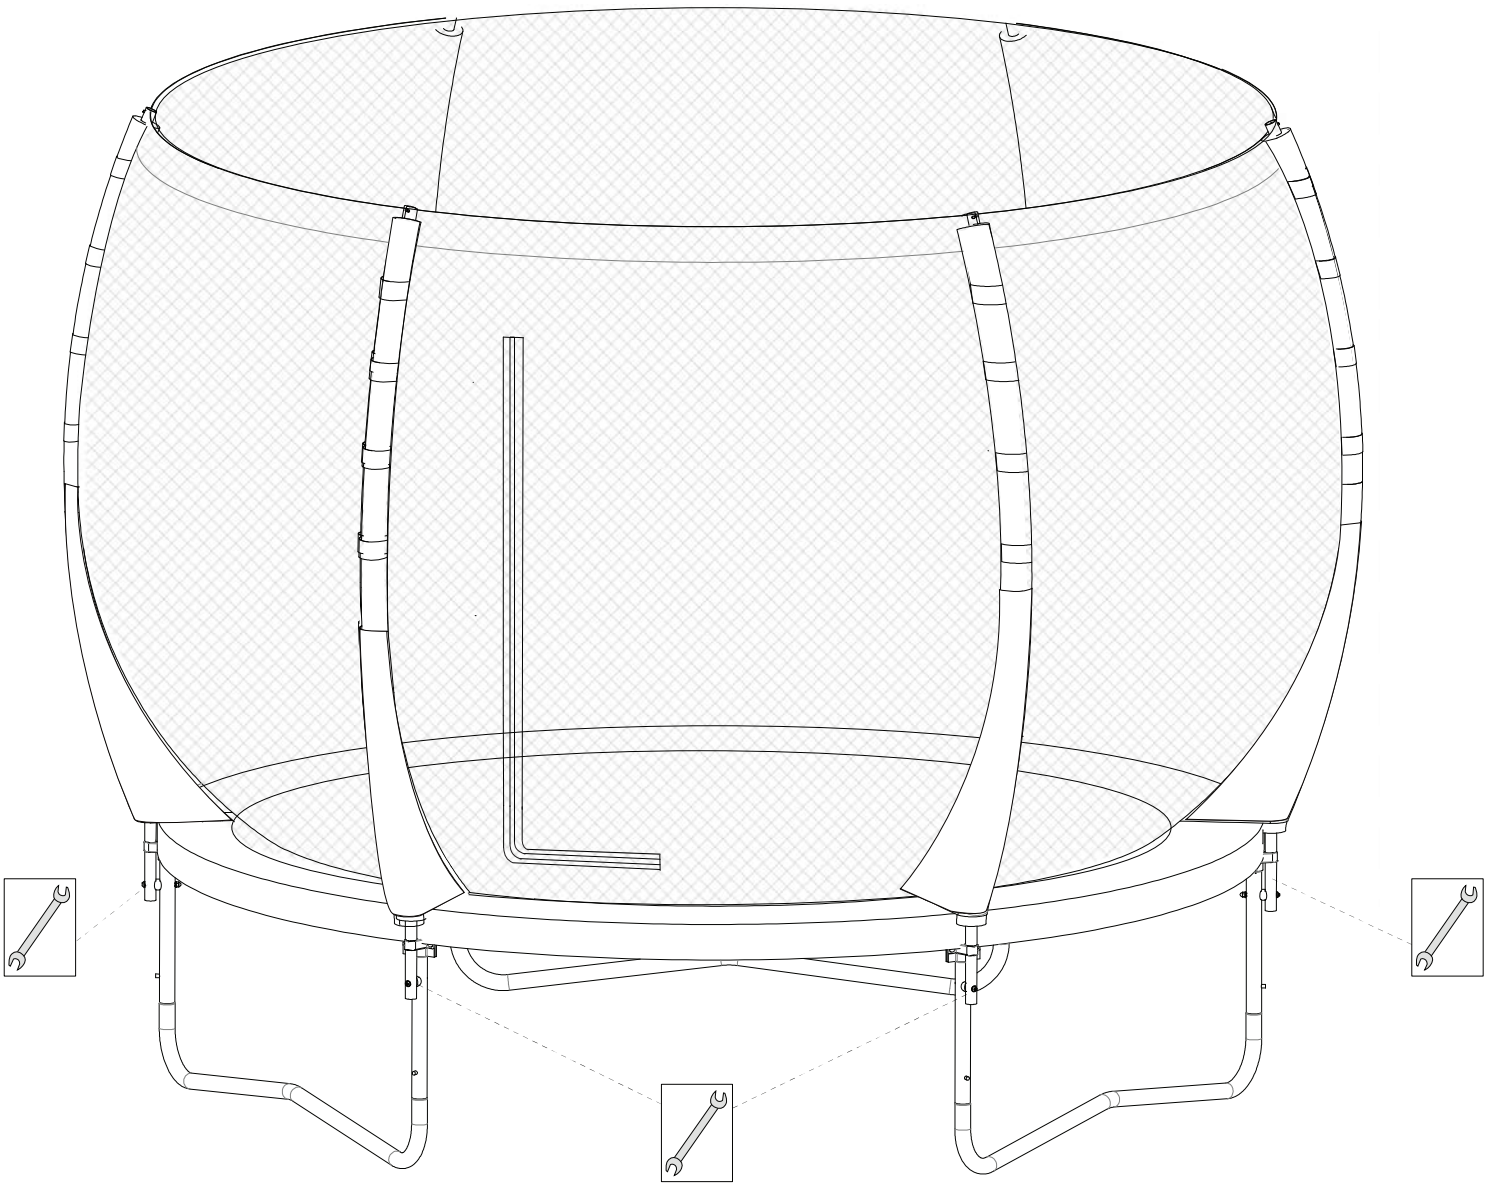

UK
Plum Products Warranty

The metal frame (comprising the steel rim, legs and metal enclosure poles) of this product is guaranteed for 12 (twelve) months from the date of purchase against manufacturing defects. The safety net, safety pad, mat, bolts and springs are guaranteed for 6 (six) months from date of purchase against manufacturing defects. The warranty is conditional on proof of purchase being presented in the event of a claim and applies in respect of products sold into the UK only.

The warranty is registered to the original owner and is non-transferable. Regular maintenance is required to ensure safety, maximum life and performance of the product. Failure by the owner to maintain the product according to the maintenance requirements may render this warranty void. Maintenance guidelines are in the Instruction Manual provided with the product.

Plum Products® Ltd supplies safe, quality products. Any modifications made to the original product could damage the structural integrity of the unit leading to failure and possible injury. Modification shall render the warranty void and Plum Products® Ltd will accept no liability for any modified products or any consequences resulting from the failure of a modified product.

This product is warranted for domestic use only. Under no circumstance should the product be used in public or commercial settings such as schools or playgrounds, any such use may lead to product failure and potential injury. Any public or commercial use will render this warranty void.

These conditions do not affect your statutory rights as a consumer.

AUSTRALIA
Plum Products Warranty

Subject to proper installation and normal residential use, Plum Products ("Plum") play products are warranted, subject to the limitations stated below, to the original retail purchaser or owner to be free from manufacturers defects in material or workmanship for a period of 1 (one) year from the date of original retail purchase.

All warranties may be registered. To register your warranty please visit www.plumproducts.com and retain your proof of purchase for the warranty period.

Goods covered under this limited warranty will be replaced or repaired, at our option, and returned to the customer at no cost to the customer. Plum reserves the right to examine photographs or physical evidence of goods claimed to be defective and to recover the goods prior to settling a warranty claim.

Non –residential use of the play products is prohibited and there will be no warranty for any commercial, competition or playground use as these products are designed for residential use only. No warranty shall apply on equipment subjected to abuse, negligence, improper installation or use, vandalism, acts of God, unauthorised alteration or attachment to other equipment, improper use or repair by the customer or a third party.

Whilst every endeavour is made to ensure the highest degree of safety in the product, freedom from injury cannot be guaranteed. It is essential to install correctly in accordance with installation instructions, supervise your children's play activity and maintain your play equipment periodically according to manufacturer guidelines.

This warranty does not cover scratching or scuffing of the product as a result of normal wear and tear and any minor defects which do not affect the functionality of the product. This warranty is expressly in lieu of all other warranties, express or implied given by Plum.

Your statutory rights remain unaffected. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law under which you are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major one.

To make a claim please contact us immediately on our customer service number or email below.
Telephone Plum Customer Services: 1800 900161
Email: Aushelpdesk@plumproducts.com

All claims must be made within 14 days of purchase or within a reasonable time of awareness of defect and must be accompanied by proof of purchase. Please therefore retain proof of purchase. Plum may reject claims which are not made within a reasonable time and/or where there is no proof of purchase. Plum will meet the cost of all agreed and validated claims.

Thank you for purchasing our product.
Plum Products Australia Pty Ltd, Suite 303, 156 Military Road, Neutral Bay, NSW 2089, Australia.

Remember to keep these instructions in a safe place for future reference.

Plum Products Ltd,
The Cliff, Middle Street
Ingham, Lincolnshire, LN1 2YQ, UK
Tel: +44 (0) 344 880 5302,
Fax: +44 (0) 152 273 0379
customerservices@plumproducts.com
www.plumproducts.com

Copyright Plum Products 2015

Plum Products Australia Pty Ltd
Suite 303, 156 Military Road
Neutral Bay, NSW 2089, Australia
Tel: +61 2 8968 2200
Email: aushelpdesk@plumproducts.com
www.plumplay.com.au

30162A1012